


Instructions for use

1. Remove the non-transparent film.
2. Affix the motif to the required location.
3. Place the affixed motif with its face on a hard surface (ironing board) – iron over the fabric, not over the transparent film.
4. Apply a hot iron (160 °C; second grade) and iron for 20-30 seconds.
5. Wait for the fabric and motif to cool down and then remove the transparent film.

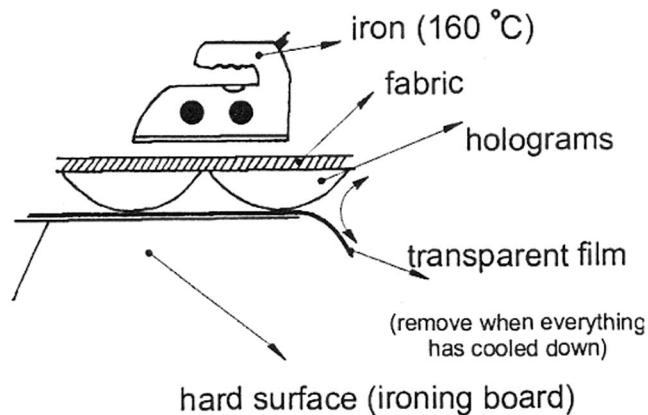

The motif is well ironed-on if glue stains can be seen on the back side of the fabric

Instructions for use

Suitable temperature and time to fix iron-on designs may vary with respect to the quality of the textile to which the hologram is fixed. For heavy cotton or linen materials we recommend higher temperatures up to 180 °C and fixing time of 30 seconds. On the contrary, on fine materials the temperature may be lower according to the type of textile and the fixing time longer.

After washing leave the textile with fixed hologram hang dry (do not tumble dry) and press once again on the reverse following the instructions.